

ENR 4.4 NAME CODE DESIGNATORS

Name-code designator	Coordinates	ATS route or other route	Remarks
ABAGU	523012N 0073848W		FRA Intermediate Point.
ABIDO	522844N 0054744W		
ADARA	513000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
ADBUS	542500N 0123000W		High Level Holding Point. FRA Intermediate Point.
ADMUP	524800N 0061400W		EID5 Avoidance Point. FRA Intermediate Point.
AGINI	530920N 0083446W		FRA Intermediate Point.
AGORI	570000N 0130000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
AKIGO	535030N 0075605W		
AMDEP	513400N 0111300W		EID14 Avoidance Point. FRA Intermediate Point.
AMLAD	561552N 0100000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
APSOV	554923N 0100000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
ARKIL	503928N 0080000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this FRA Entry & Exit Point.
ASKUP	535333N 0060632W	P600	EID1 Avoidance Point. FRA Intermediate Point.
ATSUR	500000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
BAGSO	534048N 0053000W	M145	The UK is an additional coordinating state and should be consulted for conditions on the use of this FRA Entry & Exit Point.
BAKUR	521430N 0054049W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
BAMLI	540829N 0063904W		FRA Entry & Exit Point.
BANBA	515710N 0061421W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
BEDRA	490000N 0150000W		Oceanic Entry & Exit Point FRA Entry & Exit Point.
BEGID	563000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
BEPAN	523136N 0061549W	P620	FRA Intermediate Point.
BEXET	540000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
BIBLA	510809N 0085436W		EID13 Avoidance Point. FRA Intermediate Point.
BILTO	563000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
BIMGO	493000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.

Name-code designator	Coordinates	ATS route or other route	Remarks
BOFUM	533214N 0053000W	Q37	The UK is an additional coordinating state and should be consulted for conditions on the use of this FRA Entry & Exit Point.
BOYNE	534602N 0053000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this FRA Entry & Exit Point.
BUNED	523722N 0063748W	N34	FRA Intermediate Point.
BUNON	522230N 0093237W		FRA Intermediate Point.
DEGOS	541121N 0065423W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
DEVOL	535325N 0102603W		FRA intermediate Point.
DEXEN	531649N 0053000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this FRA Entry & Exit Point.
DIGAN	525613N 0081151W	M145	FRA Intermediate Point.
DIMUS	521423N 0061505W		FRA Intermediate Point.
DINIM	510000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
DIRUM	530010N 0063940W	Q36	FRA Intermediate Point.
DOGAL	540000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
DOLIP	520000N 0120000W		FRA Intermediate Point.
ELBOB	544358N 0074438W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point.
ELSOX	510000N 0140000W		Oceanic Landfall Point FRA Intermediate Point.
ELTIG	514513N 0075006W		FRA Intermediate Point.
EMPER	490000N 0090000W		Oceanic Landfall Point. FRA Intermediate Point.
ENDEQ	532644N 0053000W	Q36	The UK is an additional coordinating state and should be consulted for conditions on the use of this FRA Entry & Exit Point.
ENOKU	530604N 0073939W	M145	FRA Intermediate Point.
ENULA	535821N 0081552W		FRA Intermediate Point.
EPUNA	503000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
ERABI	530054N 0093403W		FRA Intermediate Point.
ERNAN	541644N 0072334W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
ERTER	513343N 0080337W		FRA Intermediate Point.
ETARI	553000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
EVBAK	490000N 0100000W		Oceanic Landfall Point. FRA Intermediate Point.
EVRIN	514656N 0063348W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.

Name-code designator	Coordinates	ATS route or other route	Remarks
GAPLI	500000N 0080000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
GELPO	483839N 0093009W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point.
GERVO	530529N 0063024W	Q36	
GILAN	551348N 0070300W		FRA Entry & Exit Point.
GIMRO	533910N 0054455W		EID1 Avoidance Point. FRA Intermediate Point.
GIPER	510000N 0120000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Intermediate Point.
GISTI	530000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
GOMUP	570000N 0100000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point.
GOTEM	514926N 0074912W		FRA Intermediate Point.
GUNSO	490310N 0114606W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. Oceanic Landfall Point. FRA Intermediate Point.
GURGA	530655N 0065000W		EID5 Avoidance Point. FRA Intermediate Point.
IBATU	540512N 0080051W		
IBROD	563000N 0100000W		FRA Entry & Exit Point.
INKUR	533551N 0072329W	L975	FRA Intermediate Point.
INRAD	521529N 0090901W		FRA Intermediate Point.
JABEX	490000N 0093009W		Oceanic Landfall Point. FRA Intermediate Point.
KESIX	565700N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
KISHA	532902N 0053822W		
KOGAD	493000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
KOKIB	543000N 0140000W		Oceanic Landfall Point.
KOMAG	514335N 0083655W		EID13 Avoidance Point. FRA Intermediate Point.
KOMER	525058N 0065000W		EID5 Avoidance Point. FRA Intermediate Point.
KORAK	532342N 0074735W	L975	FRA Intermediate Point.
KUDAG	540018N 0075915W		
KUGUR	553000N 0100000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
KURUM	521343N 0083953W		FRA Intermediate Point.

Name-code designator	Coordinates	ATS route or other route	Remarks
LAPMO	532411N 0055644W		EID1 Avoidance Point. FRA Intermediate Point.
LASNO	483554N 0090000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. Oceanic Entry & Exit Point. FRA Entry & Exit Point.
LEDGO	511424N 0073405W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
LEKVA	513000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
LESLU	510000N 0080000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
LIFFY	532848N 0053000W	L975	The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Exit Point.
LILNO	513533N 0091312W		EID13 Avoidance Point. FRA Intermediate Point.
LIMRI	520000N 0150000W		Oceanic Entry & Exit Point FRA Entry & Exit Point.
LINRA	513447N 0100156W		EID14 Avoidance Point. FRA Intermediate Point.
LIPGO	530350N 0053000W	L18	The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
LODLA	515610N 0103141W		EID14 Avoidance Point. FRA Intermediate Point.
LONDU	525500N 0123000W		High Level Holding Point. FRA Intermediate Point.
LULOX	502200N 0080000W		FRA Entry & Exit Point.
LUNIG	522350N 0081634W		FRA Intermediate Point.
LUPOR	523232N 0094207W		FRA Intermediate Point.
LUSAT	531000N 0061400W		EID5 Avoidance Point. FRA Intermediate Point.
LUTOV	551422N 0100000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
MALOT	530000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
MAPAG	510000N 0083000W		FRA Intermediate Point.
MIMKU	560000N 0100000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
MOGLO	553000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
MOLAK	543549N 0093023W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Intermediate Point.
MOMIN	530648N 0092334W		FRA Intermediate Point.
MOPAT	512955N 0070538W		FRA Entry & Exit Point.

Name-code designator	Coordinates	ATS route or other route	Remarks
MOPOM	534052N 0091848W		
MORAG	524510N 0053000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
NASBA	490000N 0130000W		Oceanic Landfall Point. FRA Intermediate Point.
NAVEM	535532N 0092356W		
NEBIN	533000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
NERTU	490000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
NETKI	550000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
NEVRI	540406N 0061611W	N34	FRA Entry & Exit Point.
NEXAT	515620N 0063432W		FRA Intermediate Point.
NIBOG	550000N 0100000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
NILAV	450000N 0132500W		Spain & Portugal are additional coordinating states and should be consulted for conditions on the use of this point.
NIMAT	535754N 0054432W	P620	FRA Entry Point.
NIPIT	542709N 0082410W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Intermediate Point.
NORLA	513709N 0065211W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
ODANU	495500N 0123000W		High Level Holding Point. FRA Intermediate Point.
OLAPO	534649N 0071741W	L149	FRA Intermediate Point.
OLGON	533000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
OLONO	524323N 0064644W		FRA Intermediate Point.
OMOKO	485020N 0120000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. Oceanic Entry & Exit Point. FRA Entry & Exit Point.
ORTOM	511615N 0081758W		EID13 Avoidance Point. FRA Intermediate Point.
OSBOX	564823N 0124806W		Oceanic Landfall Point. FRA Intermediate Point.
OSGAR	530258N 0071613W	Q37	FRA Intermediate Point.
PELIG	531159N 0072000W	M145	FRA Intermediate Point.
PESIT	522357N 0054524W	L149	

Name-code designator	Coordinates	ATS route or other route	Remarks
PEVAN	554700N 0112000W		Full details of EGD701 (D701) are contained in the UK AIP and in conjunction with UK NOTAM should be consulted for activation times. EGD701 Avoidance Point. FRA Intermediate Point.
PIGET	555000N 0123000W		
PIKIL	560000N 0150000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. Oceanic Entry & Exit Point. FRA Entry & Exit Point.
RATKA	493000N 0080000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
RESNO	550000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
REVNU	542800N 0100700W		FRA Intermediate Point.
RIKUL	530328N 0082045W	L975	FRA Intermediate Point.
RILED	523000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
RINUS	533839N 0073944W		FRA Intermediate Point.
RODEL	503000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
ROTEV	540144N 0060358W	P600	FRA Entry & Exit Point.
RUXIN	561655N 0120000W		Full details of EGD701 (D701) are contained in the UK AIP and in conjunction with UK NOTAM should be consulted for activation times. EGD701 Avoidance Point. FRA Intermediate Point.
SAMON	511921N 0072504W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
SLANY	520931N 0055032W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
SOMAX	500000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
SOVED	560000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.
SOVIX	512539N 0083346W		FRA Intermediate Point.
SUNOT	570000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
SUROX	535948N 0065936W	L18	FRA Intermediate Point.
SUTEX	524928N 0065549W	Q36	FRA Intermediate Point.
SUVAN	512500N 0123000W		High Level Holding Point. FRA Intermediate Point.
TADEX	545124N 0081401W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point.
TAKAS	490000N 0080000W		France and UK are additional coordinating states and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.

Name-code designator	Coordinates	ATS route or other route	Remarks
TAMEL	484343N 0102950W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. Oceanic Entry & Exit Point. FRA Entry & Exit Point.
TIDGO	535038N 0092213W		
TIPUR	523521N 0080731W		FRA Intermediate Point.
TISMO	520805N 0080047W	Q36	FRA Intermediate Point.
TOBOR	523000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
TOMTO	525225N 0080905W	Q37	FRA Intermediate Point.
TORLU	525916N 0073459W	Q37	FRA Intermediate Point.
TUGSI	540000N 0071100W		FRA Intermediate Point.
TULTA	483437N 0080000W		France and UK are additional coordinating states and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
TURLU	500435N 0080000W		The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
TUVEN	510000N 0081500W		FRA Intermediate Point.
ULTAG	534201N 0064417W		FRA Intermediate Point.
UNBEG	524818N 0094348W		FRA Intermediate Point.
UNLID	511233N 0104329W		EID14 Avoidance Point. FRA Intermediate Point.
VAPAL	515243N 0074918W		FRA Intermediate Point.
VATRY	523316N 0053000W	M17	The UK is an additional coordinating state and should be consulted for conditions on the use of this point. FRA Entry & Exit Point.
VENER	543000N 0150000W		Oceanic Entry & Exit Point. FRA Entry & Exit Point.
XETBO	520000N 0140000W		Oceanic Landfall Point. FRA Intermediate Point.

THIS PAGE INTENTIONALLY LEFT BLANK